




# Emotron AC Drive Crane option 2.0

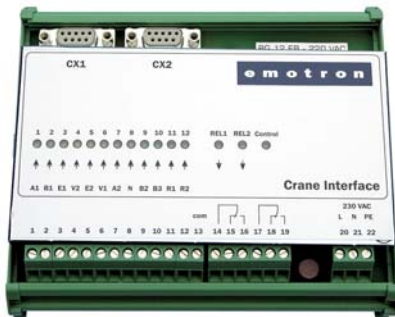

Instruction manual  
English

From Software version 4.3X  
CRIO software TN 022200.160

# CRANE OPTION 2.0

## Crane Option and Crane Interface

### INSTRUCTION MANUAL – English

Document number: 01-3411-01

Edition: r4

Date of release: 14-11-2011

© Copyright CG Drives & Automation Sweden AB 2006-2011  
CG Drives & Automation Sweden AB retains the right to change specifications and illustrations in the text, without prior notification. The contents of this document may not be copied without the explicit permission of CG Drives & Automation Sweden AB.

# Safety Instructions

## Instruction manual

Read this instruction manual first!

Because this option is a supplementary part of the frequency inverter, the user must be acquainted with the original instruction manual of the main product. All safety instructions, warnings, etc. as mentioned in these instruction manual are to be known to the user.

## Safety instructions

Read the safety instructions in the instruction manual for the main product.

## Notes, cautions, warnings and danger signs

The following indications can appear in this manual. Always read these first before continuing:

---

**NOTE: Additional information to avoid problems.**

---



**CAUTION!**

**Failure to follow these instructions can result in malfunction or damage to the variable speed drive.**

---



**WARNING!**

**Failure to follow these instructions can result in serious injury to the user in addition to serious damage to the variable speed drive.**

---

## Installation

Installation, commissioning, dismantling, making measurements, etc. on the main product may only be carried out by personnel who are technically qualified for the task. Installation must also be in accordance with the local standards. Ensure that all necessary safety measures are taken.



**WARNING!**

**Take all necessary safety precautions during installation and commissioning to prevent personal injuries, e.g. by an uncontrolled load.**

---

## Opening the frequency inverter



**WARNING!**

**Always switch off the mains supply before opening the inverter and wait at least 5 minutes to allow the buffer capacitors to discharge.**

---

Always take adequate precautions before opening the frequency inverter, although the connections for the control signals and jumpers are isolated from the mains voltage.

## Motor ID-run

For optimum performance of the inverter, it is recommended that a Motor ID-run be performed, menu [229]. For cranes only, a short ID-run without rotating the motor should be performed.



**WARNING!**

**Perform a short ID-run only without rotating the motor to prevent uncontrolled behaviour by the load, e.g. dropping.**

---

## Disconnecting the crane option board

---



**CAUTION!**

Always deactivate the crane option board in menu [3A0] before disconnecting it.

---

## Hoisting drives

---



**CAUTION!**

It is strongly recommended to use encoder feedback for hoist drives.

Make sure the encoder function, menu [22B] and the deviation function (jumper j 101) are activated. The function Motor lost menu [423] must be set to Trip.

Check these functions carefully. They are safety related and prevent the load from falling down.

---



# Contents

## Safety Instructions

|  |           |
|--|-----------|
| <b>Contents</b> .....  | <b>1</b>  |
| <b>1 Introduction</b> .....  | <b>3</b>  |
| 1.1 Crane option board.....  | 3         |
| 1.2 Encoder option board.....  | 3         |
| 1.3 Crane interface .....  | 4         |
| 1.4 Standards.....   | 4         |
| <b>2. Control Connections for Crane Option</b> .....                 | <b>5</b>  |
| 2.1 Crane option board control signals .....                         | 5         |
| 2.1.1 Relays CR1 & 2.....  | 5         |
| 2.1.2 User interface .....   | 6         |
| 2.2 Crane interface board control signals.....                       | 8         |
| 2.2.1 Crane interface board connections.....                         | 9         |
| 2.2.2 Connection of Crane option board to crane interface board..... | 11        |
| 2.2.3 Programming inverter for travel and slewing drives .....       | 12        |
| 2.2.4 Programming inverter for hoisting drives.....                  | 13        |
| <b>3. Control connections on Encoder option board</b> .....          | <b>15</b> |
| 3.1 Board layout.....  | 15        |
| 3.2 General information .....  | 16        |
| 3.2.1 Menus.....   | 16        |
| 3.2.2 Status LED.....  | 16        |
| 3.2.3 Cable recommendations and shielding .....                      | 17        |
| 3.2.4 Isolation.....   | 18        |
| 3.3 Encoder interface .....  | 18        |
| 3.3.1 Using differential signals.....                                | 19        |
| 3.3.2 Using non-differential signals .....                           | 20        |
| 3.3.3 Electrical specification encoder power output interface .....  | 21        |

|           |  |           |
|-----------|--|-----------|
| <b>4.</b> | <b>Applications and Functions.....</b>                     | <b>23</b> |
| 4.1       | Crane applications .....                                   | 23        |
| 4.1.1     | Crane option board .....                                   | 23        |
| 4.1.2     | Crane interface board .....                                | 23        |
| 4.2       | Control functions .....                                    | 24        |
| 4.2.1     | 4-speed joystick operation.....                            | 24        |
| 4.2.2     | 3-pos joystick operation .....                             | 28        |
| 4.2.3     | Analogue control.....                                      | 32        |
| 4.3       | Functions .....  | 36        |
| 4.3.1     | Deviation .....  | 36        |
| 4.3.2     | Mechanical brake.....                                      | 38        |
| 4.3.3     | End- and prelimit switches .....                           | 44        |
| 4.3.4     | Fast reverse .....   | 45        |
| 4.3.5     | Scaling.....   | 46        |
| 4.3.6     | Crane option board relay CR1 .....                         | 47        |
| 4.3.7     | Magnetizing the motor .....                                | 47        |
| 4.3.8     | Load dependent field weakening operation .....             | 48        |
| 4.3.9     | Parameter 3AG - Crane N -function.....                     | 49        |
| <b>5.</b> | <b>Functional Description .....</b>                        | <b>51</b> |
| 5.1       | Changed defaults when crane option board is activated..... | 51        |
| 5.2       | Menu descriptions.....                                     | 52        |
| <b>6.</b> | <b>Installation.....</b>                                   | <b>53</b> |
| 6.1       | Polarisation of flat cables .....                          | 53        |
| 6.2       | Mechanical mounting .....                                  | 54        |
| 6.3       | Mounting the first option board .....                      | 54        |
| 6.4       | Mounting another option board .....                        | 57        |
|           | <b>Index.....</b>  | <b>59</b> |



# 1 Introduction

This document is a complement to the instruction manual for the variable speed drive. Here we describe how to mount and connect the crane option. You will also find descriptions of crane applications and functions.

The crane option board is an option for the variable speed drives, which offers the inputs and outputs necessary for operating cranes. It can be extended with a crane interface option that provides mains isolated I/O when long control leads are used or to solve EMC problems.

Read this instruction manual carefully before commencing installation, or connecting or working with the variable speed drive with crane option board (and crane interface).

## 1.1 Crane option board

The crane option contains:

- Crane option board
- Flat cable control board (X5) - crane option board (X5)
- Mounting material
- This manual

## 1.2 Encoder option board

The Encoder option contains

- Encoder option board
- Flat cable control board (X5) - option board (X5)
- Mounting material
- Manual

---

**NOTE: This option is only needed for hoisting drives with encoder feedback.**

---

## **1.3 Crane interface**

The crane interface is an interface that provides galvanic isolation, 24 VDC or 230 VAC, and signal adjustment when connecting control equipment to the crane option board.

When the crane option board is mounted inside the variable speed drive, the crane interface extension contains:

- Crane interface (suitable for DIN-rail mounting)
- Cable 20p header - 2x D-Sub (bottom of inverter)
- 2x Cable D-Sub -D-Sub

## **1.4 Standards**

See the instruction manual for the variable speed drive.

## 2. Control Connections for Crane Option

This chapter describes the control connections on the crane option board and the crane interface.

---


**NOTE:** All menu numbers refer to the setup menu as described in the VSD manual.

---

### 2.1 Crane option board control signals

#### 2.1.1 Relays CR1 & 2

Specification: 2A/250 VAC/AC1

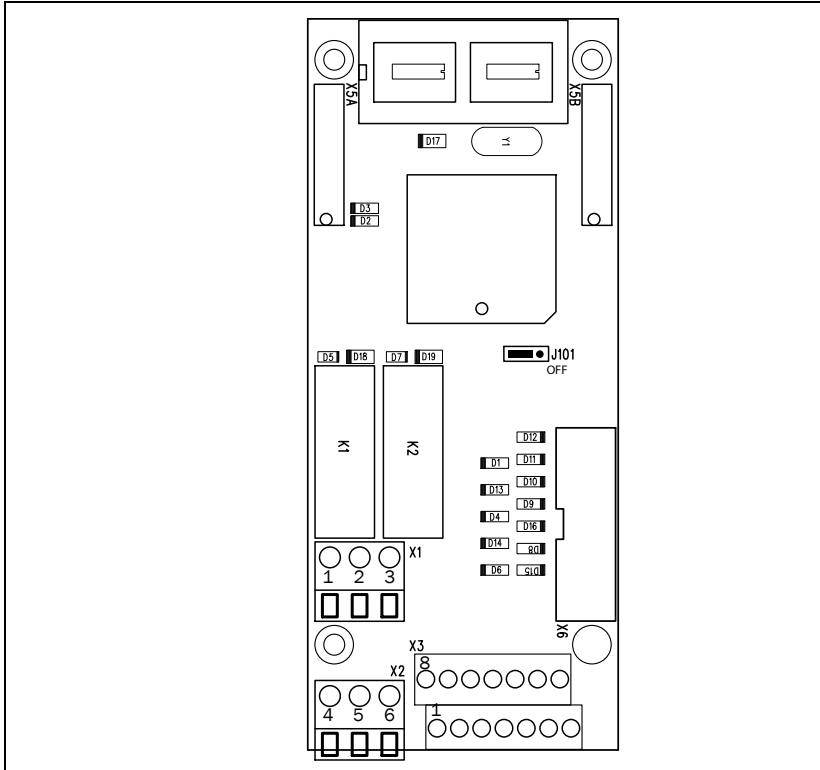

*Fig. 1 Crane option board layout*

Table 1 Function of terminals X1 and X2

| Terminal     |   | Name   | Function   |
|--------------|---|--------|--|
| X1<br>Trip-N | 1 | CR1 P  | Crane Relay CR1: central contact   |
|              | 2 | CR1 NC | Crane Relay CR1:<br>normally closed contact;<br>opens when CR1 is activated. |
|              | 3 | CR1 NO | Crane Relay CR1:<br>normally open contact;<br>closes when CR1 is activated.  |
| X2<br>Brake  | 4 | CR2 P  | Crane Relay CR2: central contact   |
|              | 5 | CR2 NC | Crane Relay CR2:<br>normally closed contact;<br>opens when CR2 is activated. |
|              | 6 | CR2 NO | Crane Relay CR2:<br>normally open contact;<br>closes when CR2 is activated.  |

## 2.1.2 User interface

Specification:

All inputs are active high up to 24 V.

Voltage range: 8 - 24 VDC type

Max. input voltage: 30 VDC

Switching levels: HIGH >8 V min  
LOW <4 V max

Input current: 1 mA type @8 VDC  
5 mA type @24 VDC

Table 2 Function of terminal X3

| Terminal | Name | Function  |
|----------|------|---|
| 1        | A1   | Start Right*/Hoist  |
| 2        | B1   | Preset Speed 2  |
| 3        | E1   | Endlimit switch Right*/Hoist  |
| 4        | V2   | Prelimit Switch Left*/Lower   |
| 5        | E2   | Endlimit switch Left*/Lower   |
| 6        | V1   | Prelimit Switch Right*/Hoist  |
| 7        | A2   | Start Left*/Lower   |
| 8        | N    | Joystick zero position or Brake acknowledge<br>(depends on setting in menu [3AG]) |
| 9        | B2   | Preset Speed 3  |
| 10       | B3   | Preset Speed 4  |
| 11       | R1   | 2nd Acc/Dec Time via Parameter Set B  |
| 12       | R2   | Run enable: 1= Start possible, 0= Coast stop                                      |
| 13       | Gnd  | Signal Ground   |

---

**NOTE: The inputs E1, E2, V1, V2 and R2 must be connected to +24VDC (or 230V for crane interface) when not in use.**

---

\* Right = Motor shaft right hand rotation = positive speed reference.  
 Left = Motor shaft left hand rotation = negative speed reference.

## 2.2 Crane interface board control signals

The LEDs indicate the status of the inputs and relays. F1 is the mains supply fuse and F2 the transformer secondary fuse.

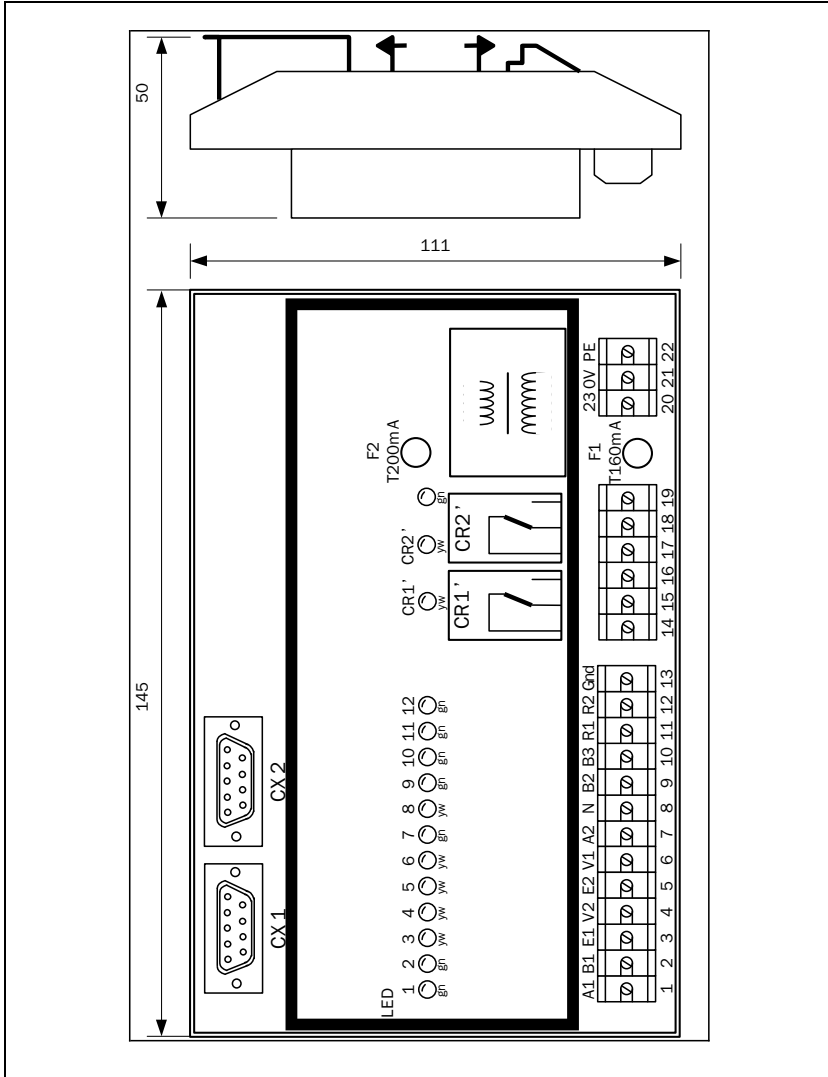


Fig. 2 Crane interface layout

## 2.2.1 Crane interface board connections

All control inputs 1-12 are active high.

### 24 VDC version:

Input voltage 15-36 V type

Input resistance 2.7 k $\Omega$

Input current 7 mA type @ 24 VDC

### 230 VAC version:

Input voltage 120-250 VAC type

Input resistance 27 k $\Omega$

Input current 5 mA type @ 230 VAC

Table 3 Function of crane interface terminal strip

| No. | Name | Function  |
|-----|------|---|
| 1   | A1   | Start Right/Hoist   |
| 2   | B1   | Preset Speed 2  |
| 3   | E1   | Endlimit switch Right/Hoist   |
| 4   | V2   | Prelimit Switch Left/Lower  |
| 5   | E2   | Endlimit switch Left/Lower  |
| 6   | V1   | Prelimit Switch Right/Hoist   |
| 7   | A2   | Start Left/Lower  |
| 8   | N    | Joystick zero position or Brake acknowledge<br>(depends on setting in menu [3AG]) |
| 9   | B2   | Preset Speed 3  |
| 10  | B3   | Preset Speed 4  |
| 11  | R1   | 2nd Acc/Dec Time via Parameter Set B  |
| 12  | R2   | Run enable: 1= Start possible, 0= Coast stop                                      |
| 13  | Gnd  | Ground connection for control signals   |

Table 3 *Function of crane interface terminal strip*

| No. | Name      | Function   |
|-----|-----------|--|
| 14  | CR1 P     | Identical function as crane relay 1. 250 VAC 1 A max.<br>(Trip-N, fixed)       |
| 15  | CR1<br>NC |  |
| 16  | CR1<br>NO |  |
| 17  | CR2 P     | Identical function as crane relay 2. 250 VAC 1 A max.<br>(Brake lift, default) |
| 18  | CR2<br>NC |  |
| 19  | CR2<br>NO |  |
| 20  | 230V      | Mains supply for the crane interface. 30 mA type.                              |
| 21  |           |  |
| 22  | PE        | Protective earth   |

---

**NOTE: The inputs E1, E2, V1, V2 and R2 must be connected to +24VDC (or 230V for crane interface) when not in use.**

---



## 2.2.2 Connection of Crane option board to crane interface board

Connector X6 on Crane option board has the same signals as terminal X3 as well as signals describing the relays.

---

**NOTE: Only used to connect the crane interface.**

---

*Table 4 Function of crane option board connector X6*

| Terminal | Name | Function  |
|----------|------|---|
| 9        | A1   | Start Right/Hoist   |
| 8        | B1   | Preset Speed 2  |
| 7        | E1   | Endlimit Switch Right/Hoist   |
| 6        | V2   | Prelimit Switch Left/Lower  |
| 4        | E2   | Endlimit Switch Left/Lower  |
| 3        | V1   | Prelimit Switch Right/Hoist   |
| 2        | A2   | Start Left/Lower  |
| 1        | N    | Joystick zero position, Brake acknowledge or no function (depends on setting in menu [3AG]) |
| 12       | B2   | Preset Speed 3  |
| 14       | B3   | Preset Speed 4  |
| 16       | R1   | 2nd Ramp via Parameter Set B  |
| 18       | R2   | Run enable: 1= Start possible, 0= Coast stop  |
| 13       | Gnd  | Signal Ground   |
| 15       | Gnd  | Signal Ground   |
| 5        | Gnd  | Signal Ground   |
| 10       |      | Unused  |
| 11       |      | Unused  |
| 17       |      | Unused  |
| 19       | CR2  | 'High (24V/4.7 k $\Omega$ ) when Crane Relay CR2 activated                                  |
| 20       | CR1  | 'High (24V/4.7 k $\Omega$ ) when Crane Relay CR1 activated                                  |

## 2.2.3 Programming inverter for travel and slewing drives

---

**NOTE: If more than one motor is connected to the inverter for these applications, menu [213] Drive Mode can be set to V/Hz.**

---

- For these applications the deviation function is not necessary. Set Jumper J101 on the crane option board to "Deviation off". Switch off the mains supply before.
- Set in menu [3A1] "CRIO = On".
- Execute "Load Defaults - Factory", in menu [243]. This instruction activates crane specific default values for menus [214], [215], [241], [339], [33C] to [33F], [423] and [424].
- After initializing, the inverter operates in Parameter Set B.
- Enter the motor data according to menu [220] and execute a short ID-RUN without rotating the motor to menu [229] for optimum performance.



**WARNING!**

**It is dangerous to perform an extended ID-run with the motor coupled, because the motor will then run at high speeds in both directions.**

---

- Set the control selection in menu [3A2], Control, according to the controller used.
- Set all parameters according to your application, e.g. all parameters in menu crane options [3A0], acceleration and deceleration time [331] [332], brake settings [33C] to [33F] and maximum speed [343].
- Set all the other parameters and functions to their required settings. The Menu List in the manual for the main product can be used as a guideline and filled in by the user for later reference.
- If an encoder is used, compare encoder speed (positive/negative) in menu [22D] with speed in menu [100]. If rotating direction is not the same, you have to change encoder signals (A and A' with B and B'). Set menu [213] Drive Mode = Speed. Set menu [22B] "Encoder = On". If more than one motor is connected to the inverter for these applications please contact your distributor.

- Now application is ready for use.

Use function fast reverse

- If you use fast reverse (see chapter 5.5.4), set parameter [241] to "Option". Copy parameter set B to A in menu [242] (B>A).
- Set lower deceleration time [332] in parameter set B according to your application.

## 2.2.4 Programming inverter for hoisting drives



### **WARNING!**

**Contact your supplier if multi-motor operation occurs in hoisting applications.**

---

- For hoisting applications the deviation function is needed (strongly recommended). Activation is later. NOW, set Jumper J101 on the crane option board to "Deviation off". Switch off the mains supply before.
- Set in menu [3A1] CRIO = On
- Execute "Load Defaults - Factory", in menu [243]. This instruction activates crane specific default values for menus [214], [215], [241], [339], [33C] to [33F], [423] and [424].
- After initializing, the inverter operates in Parameter Set B.
- Enter the motor data acc. to menu [220] and execute a short ID-run without rotating the motor, menu [229], for optimum performance.



### **WARNING!**

**It is dangerous to perform an extended ID-run with the motor coupled, because the motor will then run at high speeds in both directions.**

---

- Set the control selection in menu [3A2], Control, according to the controller used.
- Set all parameters according to your application, e.g. all parameters in menu crane options [3A0], acceleration and deceleration time [331] [332], brake settings [33C] to [33F] and maximum speed [343]. Set max speed [343] 200 rpm higher as Speed 4 [3AA]

- Set all the other parameters and functions to their required settings. The Menu List in the manual for the main product can be used as a guideline and filled in by the user for later reference.
- If an encoder is used, compare encoder speed (positive/negative) in menu [22D] with speed in menu [100]. If rotating direction is not the same, you have to change encoder signals (A and A' with B and B').

---

**NOTE: we strongly recommend use of encoder feedback on hoist drive.**

---

- Set "Encoder = On" in menu [22B], if Encoder is used.
- Activate deviation control by setting Jumper J101 on the crane option board to position "Deviation on". Switch off the mains supply before.
- Change menu [3AB] and [3AC] to the required values. (Settings Deviation).



**WARNING!**

**Make sure the deviation function, Jumper J 101 is activated. The function Overvoltage control in menu [424] must be set to OFF. Check these functions carefully. They are safety related and prevent the load from falling down.**

---

### 3. Control connections on Encoder option board

#### 3.1 Board layout

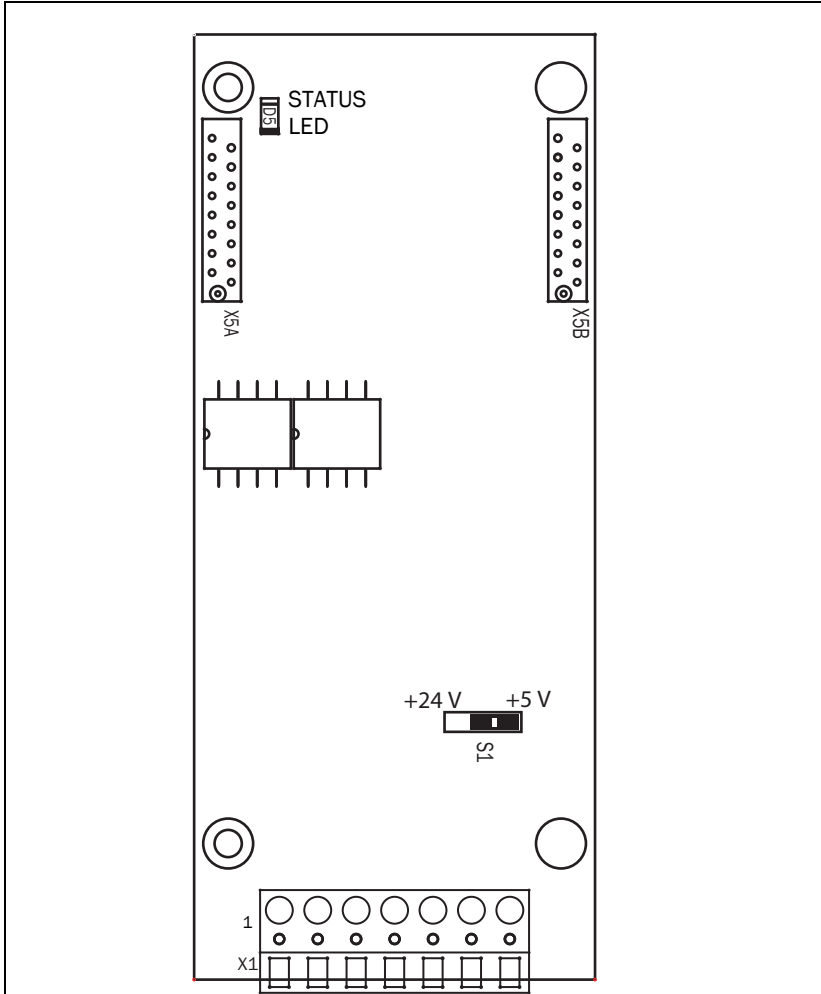


Fig. 3 Encoder option board layout

## 3.2 General information

### 3.2.1 Menus

The following menus are available when the Encoder option board is mounted in the main product.

All menus are described in the manual for the main product.

*Table 5 Menus available with the Encoder option board installed*

| <b>Menu</b> | <b>Function</b> | <b>Default</b> | <b>Range/Selection</b>                         |
|-------------|-----------------|----------------|--|
| 22B         | Encoder         | Off            | On = Encoder enabled<br>Off = Encoder disabled |
| 22C         | Enc Pulse       | 1024           | 5-16384 pulse/rev                              |
| 22D         | Enc Speed       |                | Measured motor speed                           |
| 22F         | Enc Puls Ctr    |                | Counting encoder pulses                        |


### 3.2.2 Status LED

*Table 6 Specification of status LED*

| <b>LED</b> | <b>Specification</b>   |
|------------|--|
| D5         | Flashing slow (1 Hz) = OK<br>On = communication error<br>Off = no power supply |

### 3.2.3 Cable recommendations and shielding

Shielded twisted pair cables are recommended. Connect the cable shield firmly (low ohmic connection) to the mounting plate (PE) according to picture below.

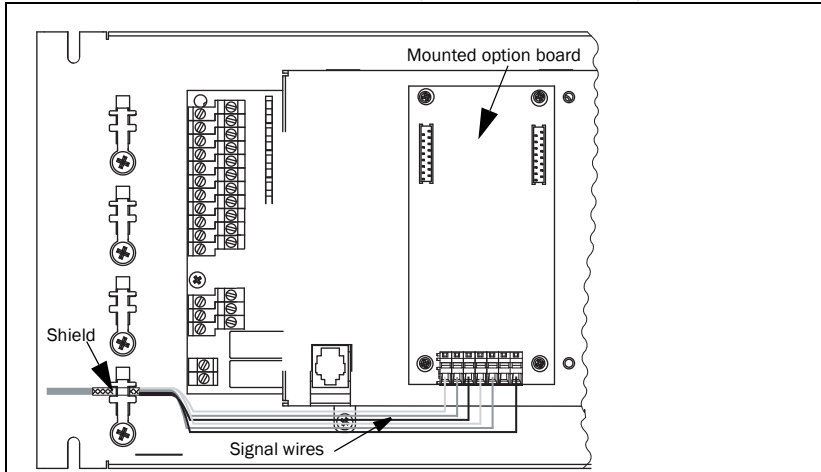

*Fig. 4 General shielding*

The shield must end at the clamp. Only the signal wires should continue to the terminals of the Encoder option board.

In most cases it is recommended that both ends of the shield are connected to PE. This will give a good attenuation of high frequency interference. Shield connection should be made with the largest possible area.

Make sure that you select a cable of material appropriate for your environment. Consider ambient temperature, humidity and occurrence of chemical substances such as oil. Standard copper wire with crossing area of approximately  $0.14 - 1.5 \text{ mm}^2$  will be sufficient in most cases.

### 3.2.4 Isolation

The encoder circuit on this option board is separated from the control board SELV circuit with functional insulation only. It is therefore important that the encoder and encoder connections are separated from live parts with double or reinforced insulation for the relevant voltage.



**WARNING:!**

**It is mandatory to use an external encoder with double or reinforced insulation towards live parts.**

---

### 3.3 Encoder interface



**WARNING!**

**Before connecting the Encoder to the Encoder option board, check the voltage rating of the encoder and make sure that the S1 switch on the Encoder option board is set to the correct position.**

---

Terminal X1 has the following terminal configuration starting from the left:

Table 7 Encoder interface, terminal X1

| X1 | Name                         | Function                                      | Remarks  |
|----|------------------------------|---|--|
| 1  | Gnd                          | Signal ground                                 |  |
| 2  | A                            | Signal A                                      | See the specification Table 9.                                 |
| 3  | A'                           | Signal A' (inverted)                          |  |
| 4  | B                            | Signal B                                      |  |
| 5  | B'                           | Signal B' (inverted)                          |  |
| 6  | $\frac{1}{2} V_{\text{sup}}$ | Half power supply voltage                     | Used for non-differential encoder inputs                       |
| 7  | $V_{\text{sup}}$             | Supply voltage to encoder; +24 VDC or +5 VDC. | Correct supply voltage must be set with S1 on the option board |

---

**NOTE: When the encoder is powered by an external supply (i.e. not by the Encoder option board itself) a +5V or +24V voltage source should be used.**

---



---

**NOTE: Only incremental encoder types can be used.**


---

---


**NOTE: This Encoder option board can handle both TTL and HTL type of incremental encoders by selecting the corresponding supply voltage with switch S1.**

---

### 3.3.1 Using differential signals

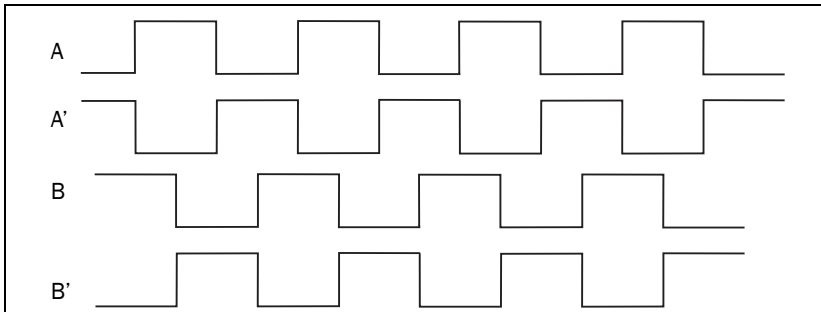

*Fig. 5 Example of two differential channels which are 90 degrees out of phase.*

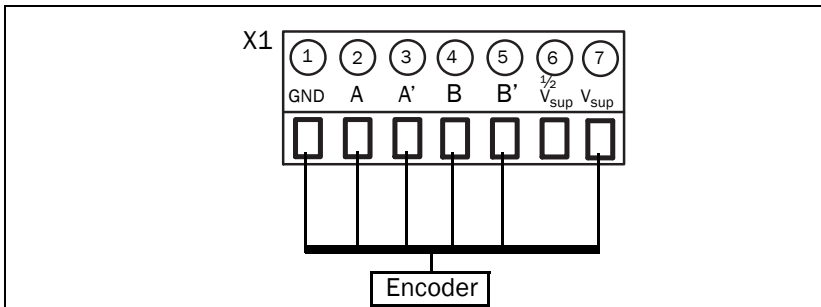

*Fig. 6 Connection on terminal.*

### 3.3.2 Using non-differential signals

In this case the two inverted input terminals A' and B' should be connected to half of the power supply (X1:6).

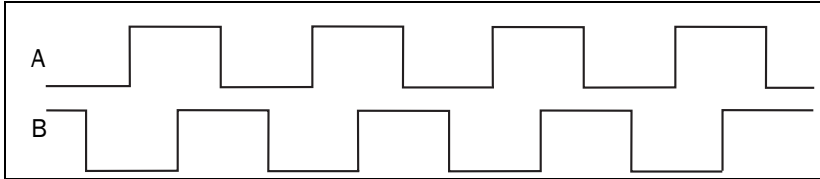


Fig. 7 Example of two non-differential channels which are 90 degrees out of phase.

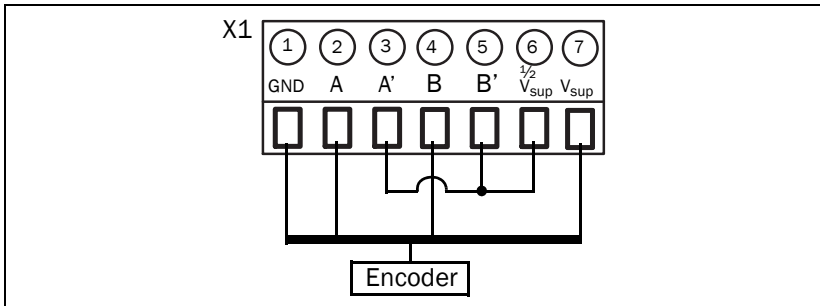


Fig. 8 Connection on terminal

### 3.3.3 Electrical specification encoder power output interface

Table 8 Setting of switch S1

| Position | Description                              |
|----------|--|
| +24      | Power supply on terminal X1:7 is +24 VDC |
| +5       | Power supply on terminal X1:7 is +5 VDC  |

Table 9

|                                      |  |
|--------------------------------------|--|
| Allowed voltage amplitude input      | +5 - 24 VDC                                  |
| Input impedance                      | min 9 k $\Omega$                             |
| Supply to encoder                    | +5/24 VDC - 100 mA max selected by switch S1 |
| Pulse range (adjustable in inverter) | 5 - 16384 pulse/rev                          |
| Max input frequency                  | 100 kHz                                      |
| Differential input sensitivity       | $\pm$ 200 mV                                 |



## 4. Applications and Functions

### 4.1 Crane applications


The crane option board is especially developed for crane applications. Apart from the three possible controller configurations (4-0-4, 3-pos or analogue controllers) it has inputs for prelimit and limit switches. For hoisting applications an encoder can be connected, which is mandatory when the deviation function is used. Crane specific functions are fast reversing, parameter set B, pre-magnetised motor for fast starting and special brake functions. For retrofitting the crane interface can be used. It has 230 VAC control inputs (other voltages on request) and provides galvanic isolation. LED status indication makes the commissioning easier.

#### 4.1.1 Crane option board

- 12 digital input connections for controller (4-0-4, 3-pos or analogue) end/pre limit switches, zero position, parameter set B, inverter stage deactivation
- Relays for brake control and deviation function

#### 4.1.2 Crane interface board

- Externally mounted on DIN-rail
- Connected to the crane option board via D-sub connectors
- Control inputs 24 Vdc or 230 VAC (other voltages on request)
- LED status indication
- Galvanic isolation

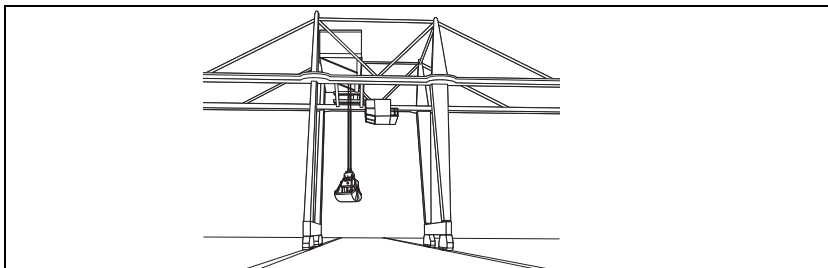

*Fig. 9*

## 4.2 Control functions

### 4.2.1 4-speed joystick operation

Connection example for 4-speed joystick operation

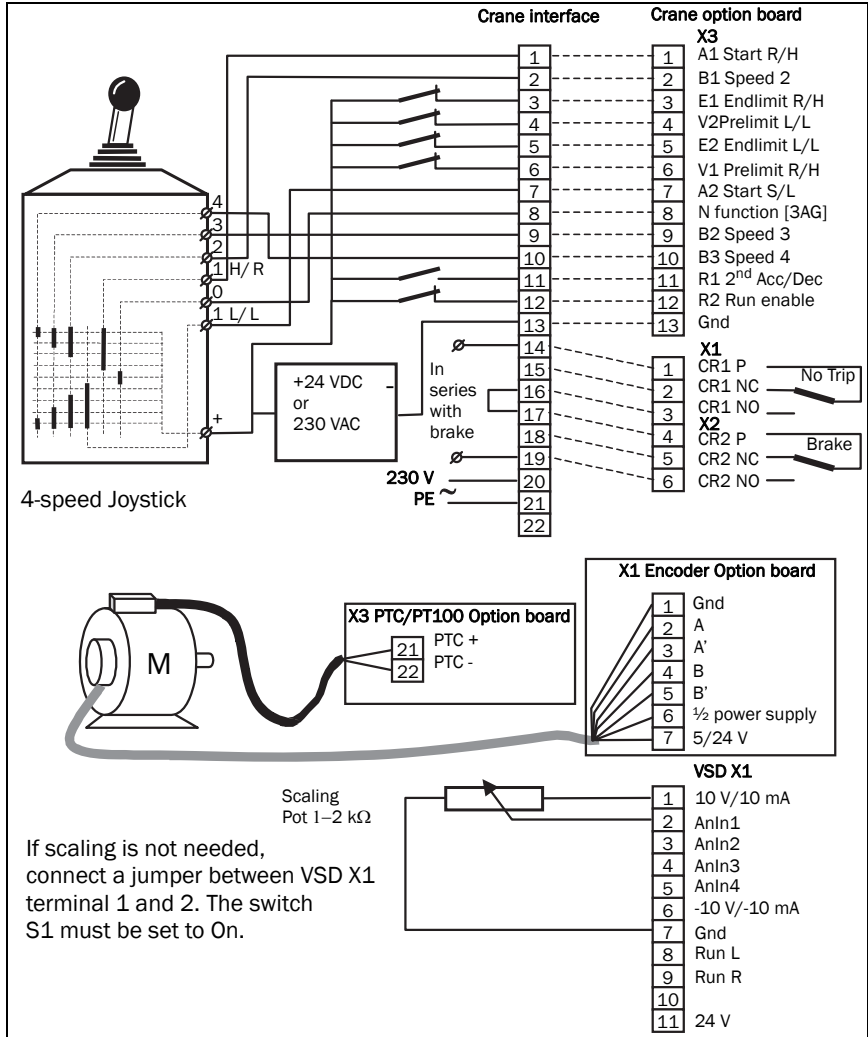


Fig. 10 Connection diagram for 4-speed joystick operation

## Setting the speeds for 4-speed joystick operation

| Menu no. | Menu name    | Function/Value                 |
|----------|--------------|--------------------------------|
| 3A1      | Crane enable | On                             |
| 3A2      | Control      | 4-speed joystick               |
| 3A3      | Crane Relay1 | No trip (fixed)                |
| 3A4      | Crane Relay2 | Brake lift                     |
| 3A5      | PreLimSwSpd  | Pre Limit switch speed         |
| 3A6      | CrawlSpd H/R | Start speed Right/Hoist        |
| 3A7      | CrawlSpd L/L | Start speed Left/Lower         |
| 3A8      | Speed 2      | Speed 2                        |
| 3A9      | Speed 3      | Speed 3                        |
| 3AA      | Speed 4      | Speed 4                        |
| 3AB      | Dev Bandwidt | Deviation Bandwidth            |
| 3AC      | Dev Time     | Deviation Time                 |
| 3AD      | LAFS Load    | Set field weakening load level |
| 3AG      | Crane N Func | CRIO N input function          |

## Setting the brake functions

| Menu no. | Menu name   | Function/Selection    |
|----------|-------------|-----------------------|
| 33C      | Brk Release | Brake Release time    |
| 33D      | Brk Spd     | Release Speed         |
| 33E      | Brk Engage  | Brake Engage time     |
| 33F      | Brk Wait    | Brake Wait time       |
| 33H      | Brk Fault   | Brake Fault trip time |

---

**NOTE: The inputs E1, E2, V1, V2 and R2 must be connected to +24 VDC (or 230V for crane interface) when not in use.**

---


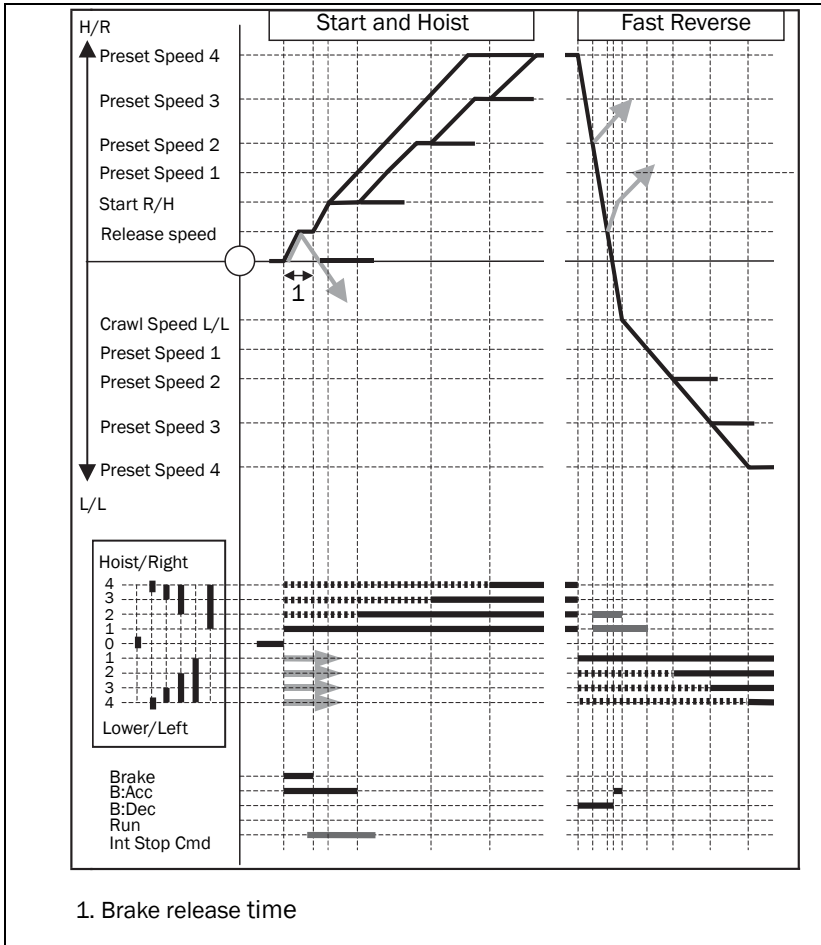


Fig. 11 General diagram for 4-speed joystick operation



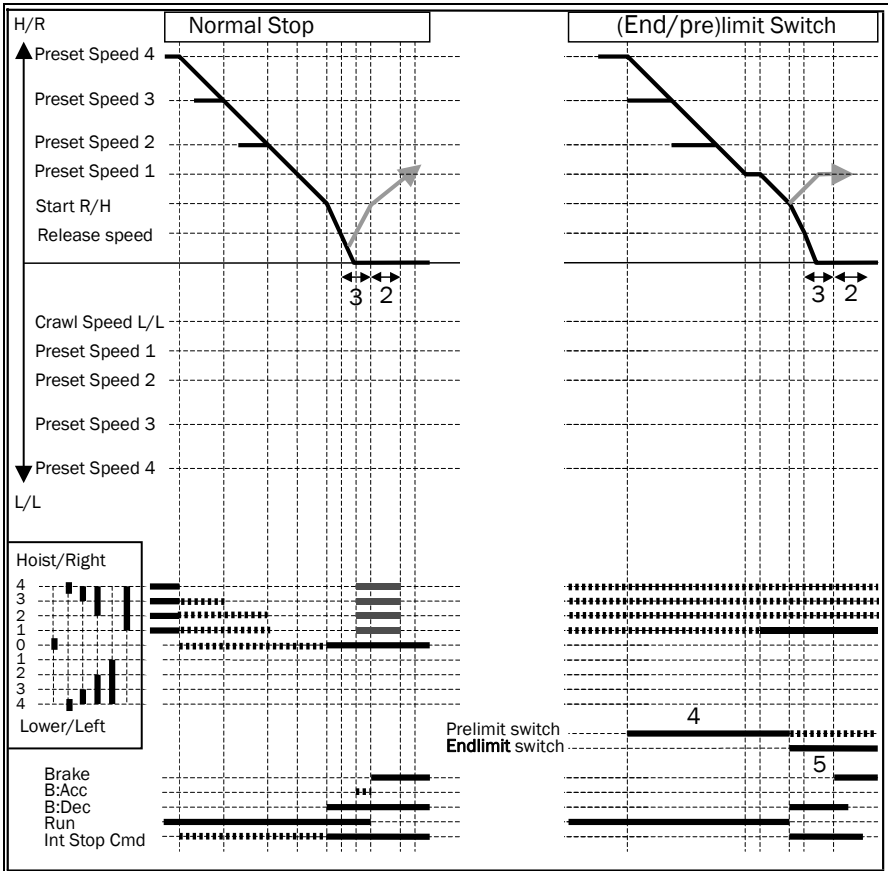

2. Brake engage
3. Brake wait
4. When prelimit switch active only speed between Crawl Speed and Preset Speed 1 in moving direction or reverse speeds possible.
5. When endlimit switch active only reverse speeds possible.

Fig. 12 General diagram for 4-speed joystick operation

## 4.2.2 3-pos joystick operation

Connection example for 3-position joystick operation

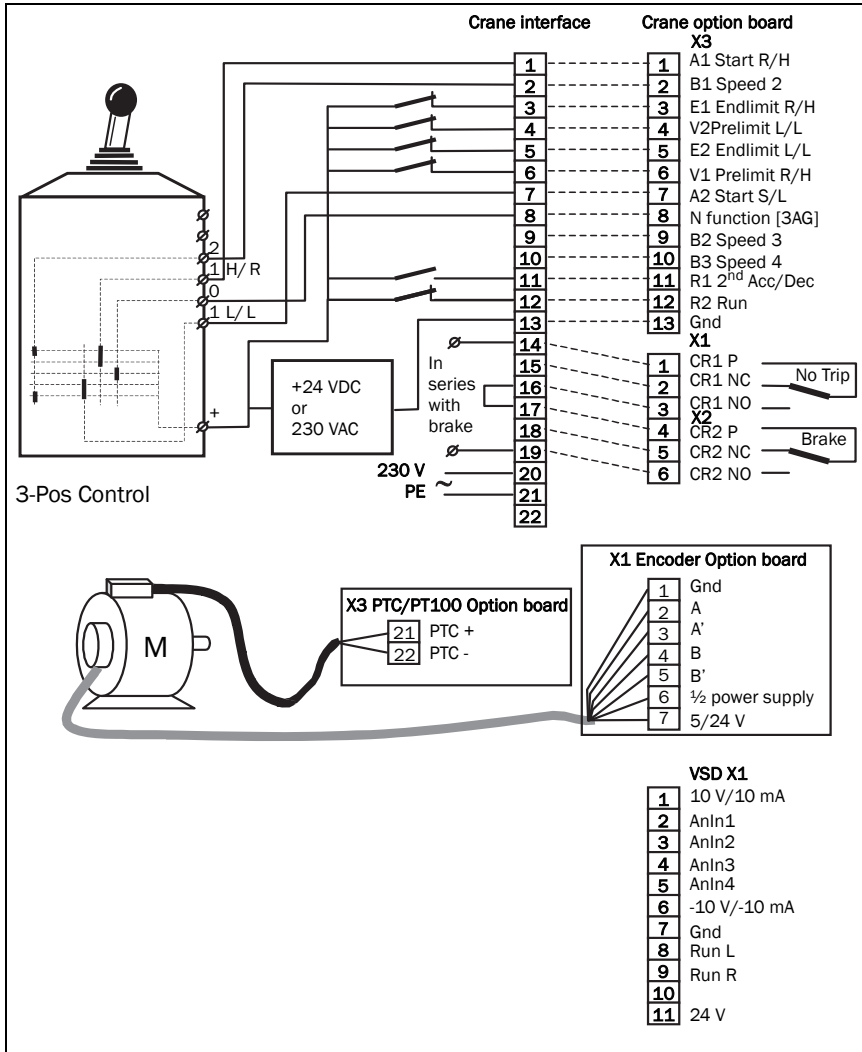


Fig. 13 Connection diagram for 3-position switch operation

## Setting the speeds for 3-position switch operation

| Menu no. | Menu name    | Function                    |
|----------|--------------|-----------------------------|
| 3A1      | Crane Enable | On                          |
| 3A2      | Control      | 3-pos (3-position joystick) |
| 3A3      | Crane Relay1 | No trip (fixed)             |
| 3A4      | Crane Relay2 | Brake lift                  |
| 3A5      | PreLimSwSpd  | Pre Limit switch speed      |
| 3A6      | CrawlSpd H/R | Start speed Right/Hoist     |
| 3A7      | CrawlSpd L/L | Start speed Left/Lower      |
| 3AA      | Speed 4      | Speed 4                     |
| 3AB      | Dev Bandwidt | Deviation Bandwidth         |
| 3AC      | Dev Time     | Deviation Time              |
| 3AD      | LAFS Load    | Field weakening load level  |
| 3AG      | Crane N Func | CRIO N input function       |

## Setting the brake functions

| Menu no. | Menu name   | Function/Selection    |
|----------|-------------|-----------------------|
| 33C      | Brk Release | Brake Release time    |
| 33D      | Brk Spd     | Release Speed         |
| 33E      | Brk Engage  | Brake Engage time     |
| 33F      | Brk Wait    | Brake Wait time       |
| 33H      | Brk Fault   | Brake Fault trip time |

---

**NOTE! The inputs E1, E2, V1, V2 and R2 must be connected to +24 VDC (or 230V for crane interface) when not in use.**

---


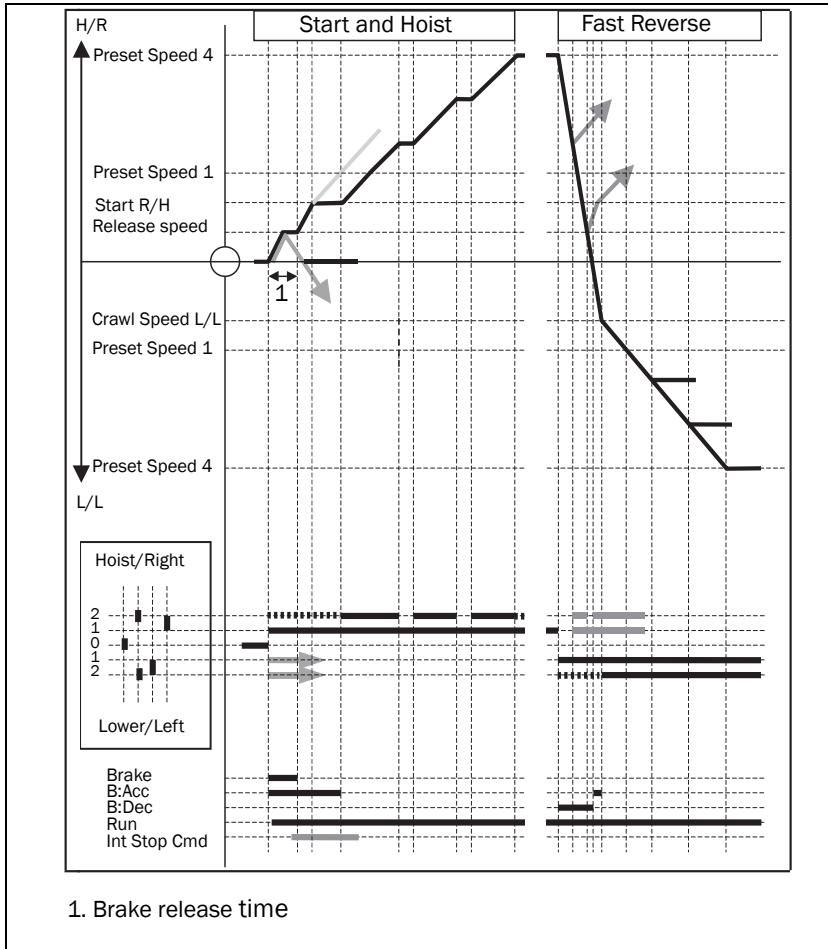


Fig. 14 General diagram for 3-position switch operation

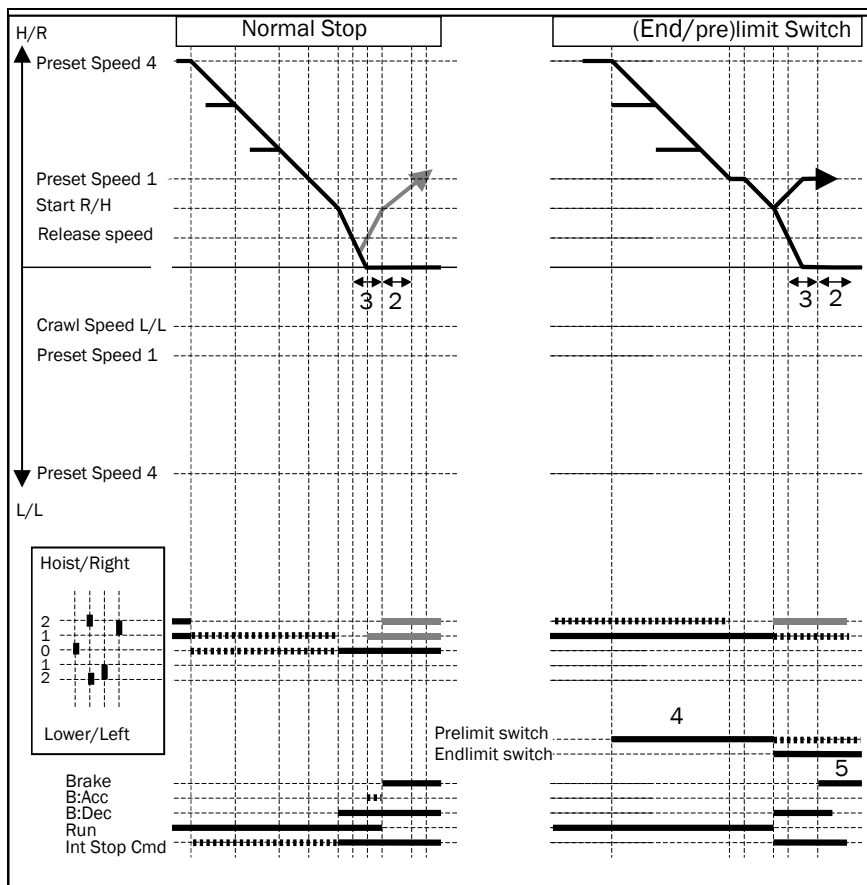

2. Brake engage
3. Brake wait
4. When prelimit switch active only speed between Crawl Speed and Preset Speed 1 in moving direction or reverse speeds possible.
5. When endlimit switch active only reverse speeds possible.

Fig. 15 General diagram for 3-position switch operation

### 4.2.3 Analogue control

Connection example for 4-20 mA analogue control operation

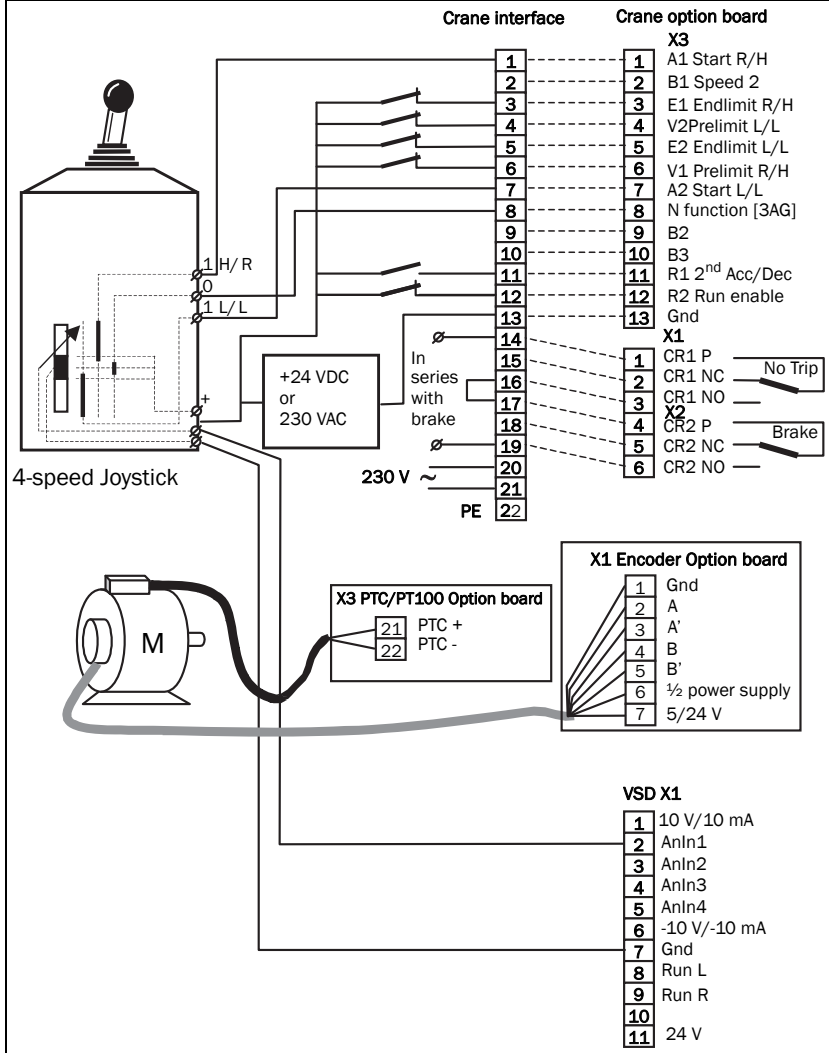


Fig. 16 Connection diagram for 4-20 mA analogue control operation

## Setting up analogue control operation

| <b>Menu no.</b> | <b>Menu name</b> | <b>Function</b>            |
|-----------------|------------------|----------------------------|
| 3A1             | Crane Enable     | On                         |
| 3A2             | Control          | Analogue (joystick)        |
| 3A3             | Crane Relay1     | No trip (fixed)            |
| 3A4             | Crane Relay2     | Brake lift                 |
| 3A5             | PreLimSwSpd      | Pre Limit switch speed     |
| 3A6             | CrawlSpd H/R     | Start speed Right/Hoist    |
| 3A7             | CrawlSpd L/L     | Start speed Left/Lower     |
| 3AA             | Speed 4          | Speed 4                    |
| 3AB             | Dev Bandwidt     | Deviation Bandwidth        |
| 3AC             | Dev Time         | Deviation Time             |
| 3AD             | LAFS Load        | Field weakening load level |
| 3AG             | Crane N Func     | CRIO N input function      |

## Setting the brake functions

| <b>Menu no.</b> | <b>Menu name</b> | <b>Function/Selection</b> |
|-----------------|------------------|---------------------------|
| 33C             | Brk Release      | Brake Release time        |
| 33D             | Brk Spd          | Release Speed             |
| 33E             | Brk Engage       | Brake Engage time         |
| 33F             | Brk Wait         | Brake Wait time           |
| 33H             | Brk Fault        | Brake Fault trip time     |

## Setting the AnIn1 Setup

| <b>Menu no.</b> | <b>Menu name</b> | <b>Function/Selection</b>                  |
|-----------------|------------------|--|
| 512             | AnIn1 Setup      | 2-10 V/4-20 mA (if 4-20 mA to be selected) |

**NOTE: The inputs E1, E2, V1, V2 and R2 must be connected to +24 VDC (or 230V for crane interface) when not in use.**


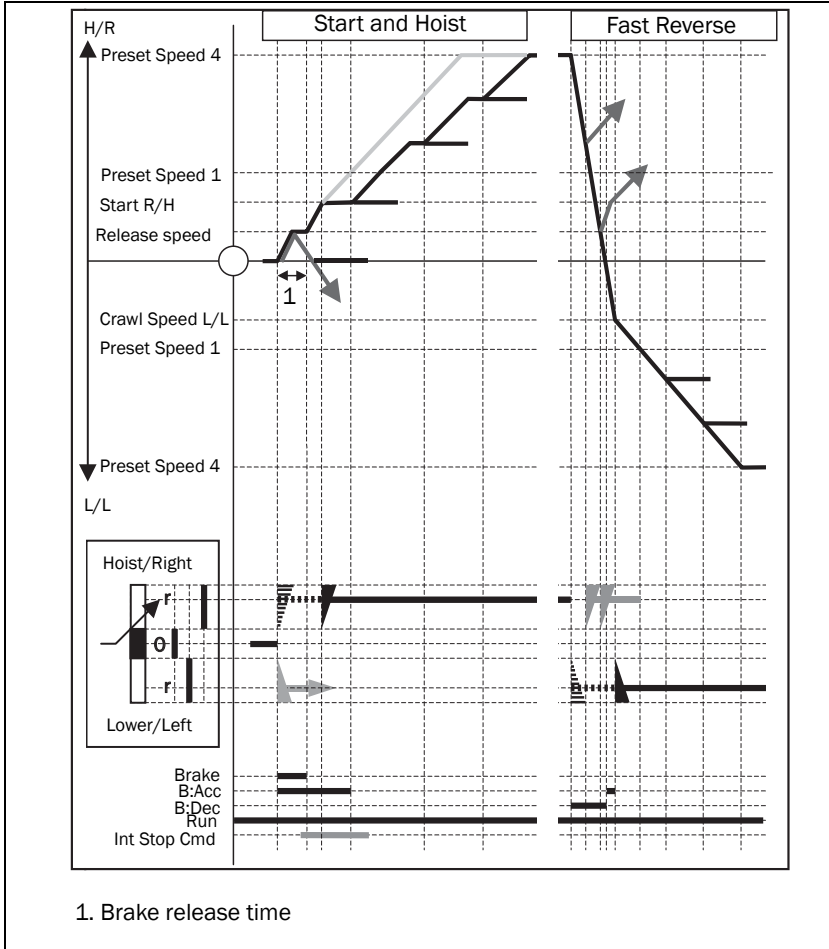


Fig. 17 General diagram for analogue control operation



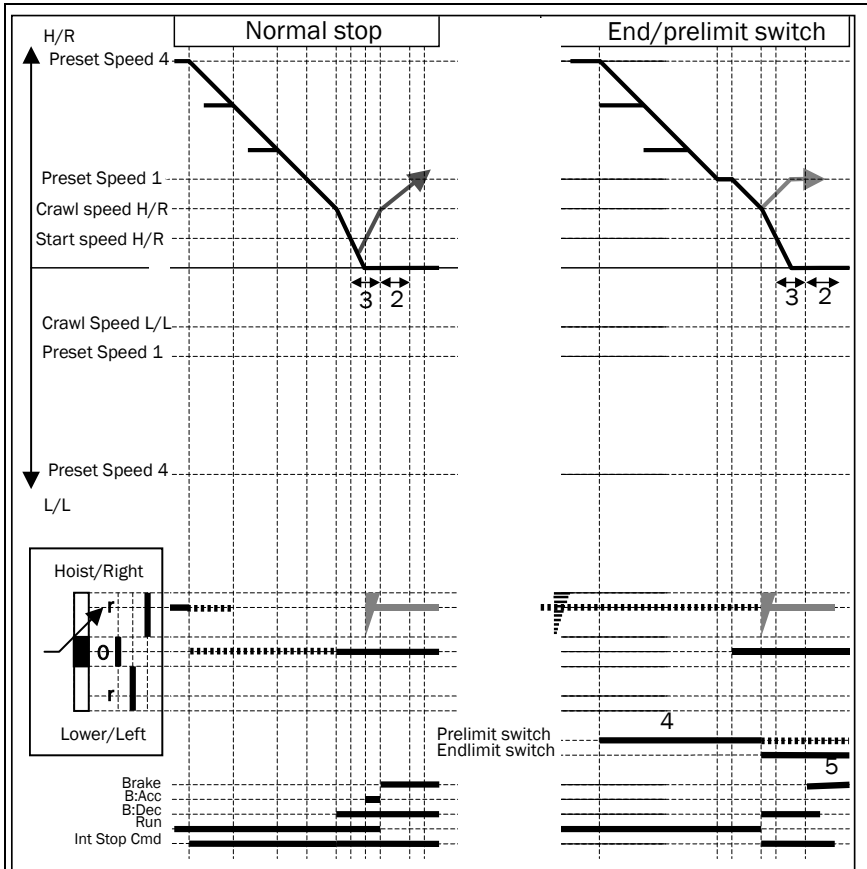

2. Brake engage
3. Brake wait
4. When prelimit switch active only speed between Crawl Speed and Preset Speed 1 in moving direction or reverse speeds possible.
5. When endlimit switch active only reverse speeds possible.

Fig. 18 General diagram for analogue control operation

## 4.3 Functions

### 4.3.1 Deviation

Deviation is a special safeguard function for a crane's hoisting function that prevents the load from falling. For safety reasons it cannot be performed by the inverter itself but must be performed by an independent unit, in this case the crane option board. This is because it functions independently after it has been initialised, although it uses information from the inverter.



**WARNING!**

**Depending on local regulations it may be necessary to install a fully independent safety system, including control of the mechanical brake.**

---

#### Deviation function

The deviation function compares the actual reference speed on the inverter's internal ramp signal with the motor speed from the encoder and determines whether they match or not, with the direction also being taken into account. If they do not match, the load is assumed to be "lost", the crane board switches Relay CR1 (Deviation) and the inverter activates the relay output for the mechanical brake and trips. Also the communication between crane board and inverter is monitored. After a communication time-out of approx. 600 ms the crane board relays activate accordingly. This condition automatically ends when the communication is restored.



**CAUTION!**

**When menu [3A2] Control = Analogue the inverter reference speed does not come from the crane board but from an analogue input (AnIn1 to AnIn4).**

---

If the difference between the reference speed and encoder speed, set in menu [3AB], Deviation Band (rpm), is exceeded, the deviation function will be activated.

The minimum duration for the difference to exceed the bandwidth before the deviation function is activated is set in menu [3AC], Deviation Time.



---

**NOTE: An encoder is mandatory for the deviation function.**

---

## (De)activating deviation function

For travel or slewing drives, the deviation function is switched off by the jumper on the crane option board.

| <b>Jumper J101 setting</b>  |                                |
|---|--------------------------------|
|  | Deviation function activated   |
|  | Deviation function deactivated |

### 4.3.2 Mechanical brake

The mechanical brake is used to achieve a smooth change-over from run to stop and vice versa. The mechanical brake can be controlled by selecting the “Brake” function for the relays R1 and R2 on the control board or the relay CR2. This is the default setting of relay CR2.

#### Mechanical brake function at start

After a start hoisting command, also see Fig. 19 below, the speed increases up to the Release Speed H/R. After the brake release time the speed is allowed to increase further, depending on the speed reference of course. The brake should be released within the brake release time, or the brake release time must be set to a little lower value than the actual release time of the brake. Only then it is ensured that the load will be held when the brake is released.

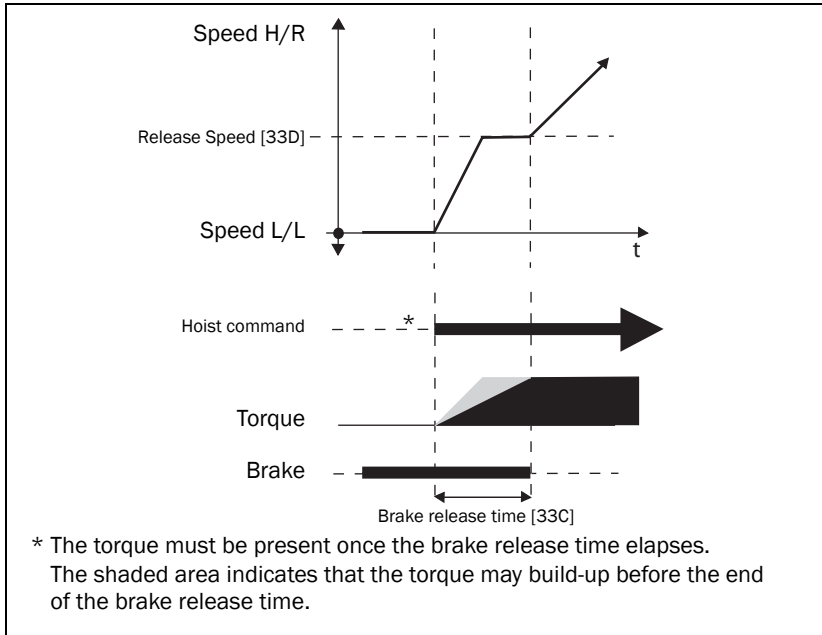


Fig. 19 Diagram of brake function at start of hoisting

After a start lowering command, also see Fig. 20 below, the speed increases up to the Release Speed to build up torque to hold the load. After the brake release time the speed is allowed to increase in the opposite direction, depending on the speed reference of course. The brake should be released within the brake release time, or the brake release time must be set to a little lower value than the actual release time of the brake. Only then it is ensured that the load will be held when the brake is released.

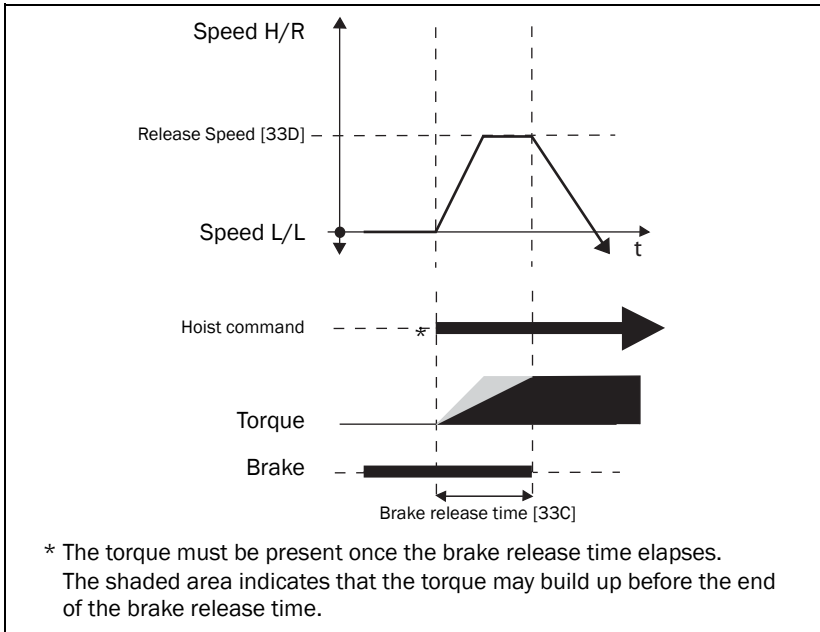


Fig. 20 Diagram of brake function at start of lowering

## Release torque

The Brake Release Time [33C] sets the time the VSD delays before ramping up to whatever final speed reference value is selected, to allow the brake to be fully opened. During this time a holding torque to prevent roll-back of the load can be activated. The parameter Release Torque [33I] is used for this purpose.

The release torque initiates the torque reference from the speed controller during the Brake Release Time [33C]. The release torque defines a minimum level of release (holding) torque. The set release torque is internally overruled if the actual required holding torque measured at the previous closing of brake is higher.

The release torque is set with sign in order to define the holding torque direction.

---

**NOTE: The default value for Release speed [33D] is zero.  
You can use this parameter for hoisting drives without encoder (not recommended) to compensate a load dip.**

---

## Mechanical brake function at stop

When a stop command is issued during hoisting the hoisting, also see Fig. 21 below, speed is decreased down to 0 rpm. During the brake wait time the load is held and it is possible to increase the hoisting speed again. During the brake engage time the brake is engaged and the brake engage time must be set to a value greater than the actual brake engage time of the brake to ensure the brake is on when the torque is finally reduced to zero.


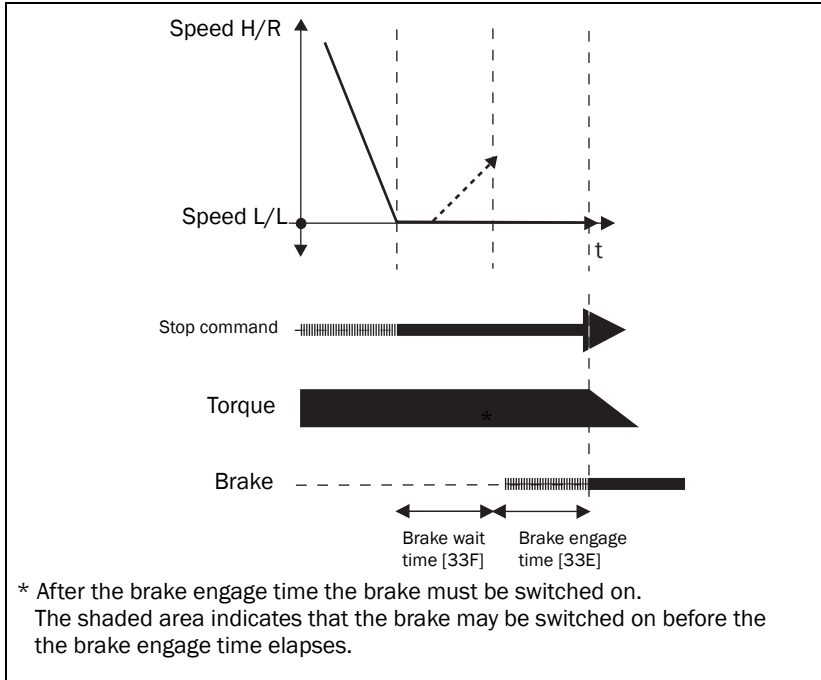


Fig. 21 Diagram of brake function at stop hoisting

When a stop command is issued during lowering, also see Fig. 22, the speed is decreased to 0 rpm. During the brake wait time the load is held and it is once more possible to lower or hoist. During the brake engage time the brake is engaged and the brake engage time must be set to a value greater than the actual brake engage time of the brake to ensure the brake is on when the torque is finally reduced to zero.




*Fig. 22 Diagram of brake function at stop lowering*

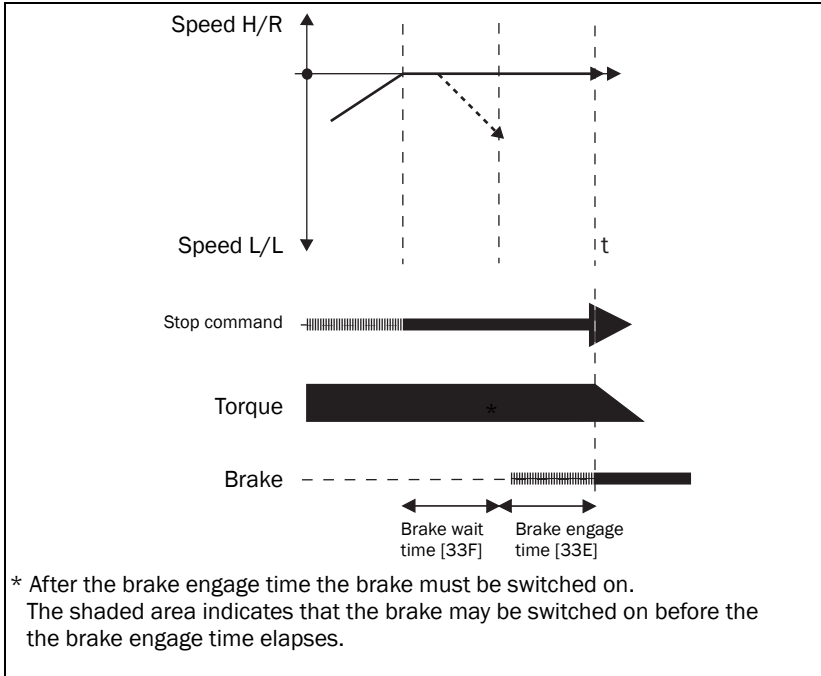

## Coordination of brake and deviation function

To get the fastest response to a deviation condition, it is recommended that the crane board Relay 1 N/O contact (No Trip/Deviation) be put in series with the N/O contacts of the brake relay (either crane board Relay 2 or one of the relays on the control board, depending on the programming). This series connection should be put in the brake circuit.

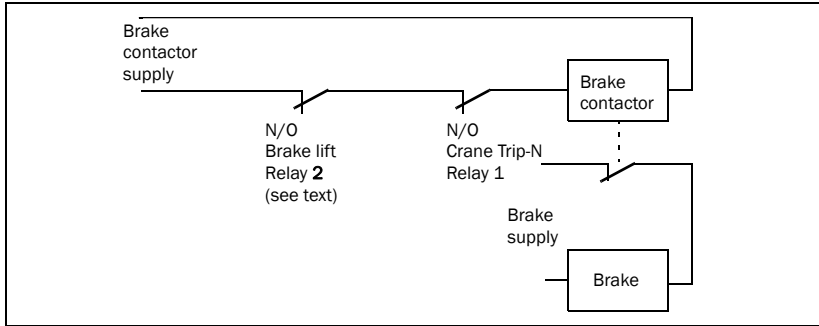

*Fig. 23 Recommended brake circuitry*

Fig. 23 shows the recommended connection for deviation (crane board Relay 1) and the brake relay. When the deviation function is activated, the brake is activated and the inverter stops. When the joystick is put in the null position within 3 s, a restart can be performed, otherwise the inverter trips with the trip message "Deviation".

As a restart will generally be prevented following the activation of the deviation function, crane board Relay 1 will operate the mains contactor.

### 4.3.3 End- and prelimit switches

This function is used to achieve a smoother and more secure run to the end points. The end/pre limit switches are connected to the inputs E1, E2, V1, V2, see Fig. 10, Fig. 13 and Fig. 16, and should open when active. The following diagram illustrates their effect:

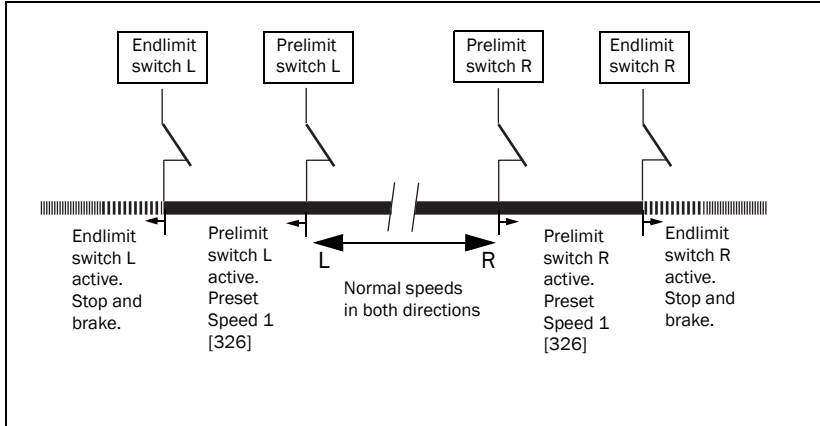


Fig. 24 Effect of end/pre limit switches

The VSD operates normally between the two prelimit switches.

When only a prelimit switch is active, the inverter is allowed to move with the prevailing Crawl Speed or Preset Speed 1 (or a speed in between these values if a 3-position switch or analogue control is used) in the direction of the limit switch or is allowed to move in the opposite direction at any speed.

When an endlimit switch is active, the inverter ramp stops (and the brake is closed at standstill) and is only allowed to move in the opposite direction at any speed.

---

**NOTE: The inputs E1, E2, V1, V2 and R2 must be connected to +24 VDC (or 230V if using crane interface board) when not in use.**

---

## Operation of endlimit switch without activated prelimit switch

Sometimes the endlimit switch can be activated without an activated prelimit switch, e.g. when two bridge cranes ride on the same rail with a endlimit switch on each cable reel or as an anti-collision mechanism.

The crane is stopped if endlimit switch is activated. Contrary to normal endlimit switch operation, the crane can be moved again in both directions after the joystick has been in the zero position, provided the endlimit switch concerned is deactivated.

### 4.3.4 Fast reverse

When the controller is moved in the opposite speed direction during hoisting, the inverter starts a fast reversal function by decelerating with the 2nd Dec Time.

It keeps decelerating with the 2nd Dec Time until 0 rpm, after which it accelerates in the opposite speed direction with the 2nd Acc Time to Crawl Speed. Then, depending on the controller position, it accelerates further to the desired speed. See diagrams in § 4.2, page 24.

Programming:

- Check that Parameter Set A and B has the same setting. If not, use Parameter [242] Copy Set.
- Set Parameter [241] to “Option”.
- Press Enter key and keep it pressed until “To all Sets” is displayed. Press Enter again. Now Parameter Set B will be active at stop and reverse.
- In Parameter [331] reduce the second Acceleration time.

---

**NOTE: The 2nd Dec Time and 2nd Acc Time are set in Parameter Set B.**

---

### 4.3.5 Scaling

This function is used if you want to decrease the speeds and retain the ratio between the speeds.


---

**NOTE: Only applicable when controlled by a 4-speed joystick.**

---

When menu [3A2] Control = 4-Speed, the inverter speed is scaled by AnIn1. If scaling is not required, AnIn1 must be connected to +10 V (or +20 mA).

The scaling works according to the diagram in Fig. 25:

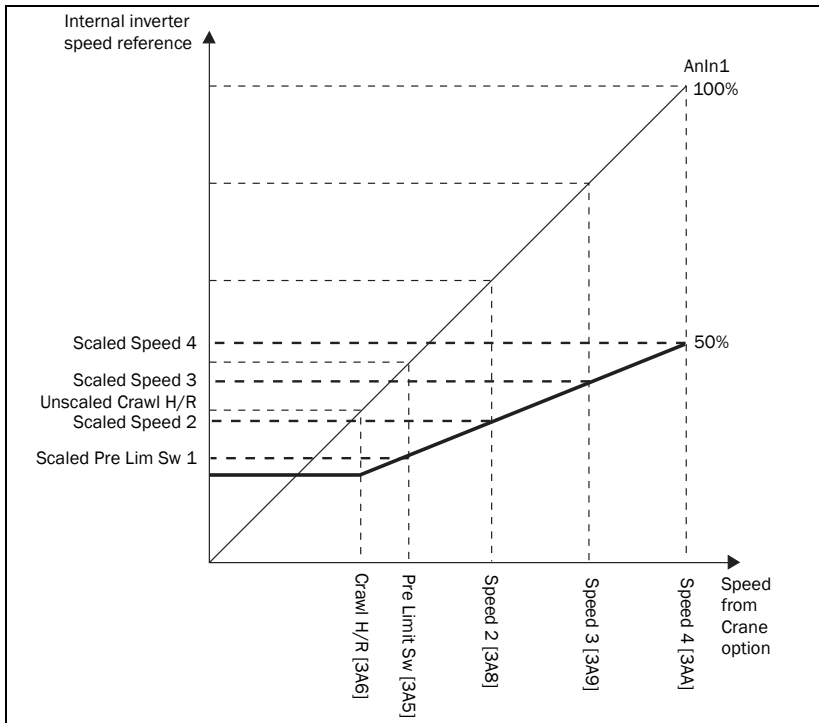

*Fig. 25 Effect of scaling the speed reference from the crane option board*

---

**NOTE: If no scaling is used when 4-speed control is selected, AnIn 1 has to be connected to +10 V by a jumper, see Fig. 25.**

---

### 4.3.6 Crane option board relay CR1

This relay has a fixed "No Trip" function.

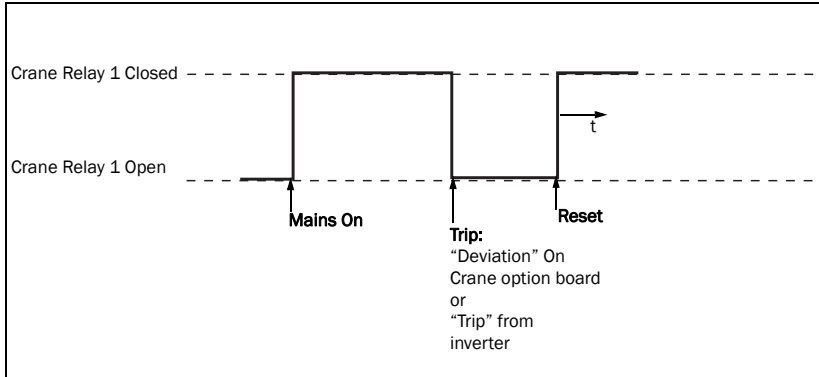


Fig. 26 Crane relay CR1 function

---

**NOTE: When the inverter is switched off, crane option board relay CR1 is open and indicates a "Trip" condition where there is none. This must be dealt with by the user to prevent a false trip warning.**

---

### 4.3.7 Magnetizing the motor

In order to get the fastest motor response to a Run command (derived from the controller action), the motor maybe kept magnetized during stop. When Start Mode=Normal DC is selected in menu [339], the motor is magnetized before each run command is executed. In many crane applications this takes too long. It is therefore possible to set a digital input to the function Motor PreMag. By making this specific digital input high, it will be possible to keep the motor magnetized when it is stopped. The current level is approx. 0.4 INOM. But the voltage is very low (approx. 2V). Forced cooling is not necessary.

### 4.3.8 Load dependent field weakening operation

Load dependent field weakening operation allows hoisting/lowering at speeds above sync speed when the load is low or zero (empty hook).

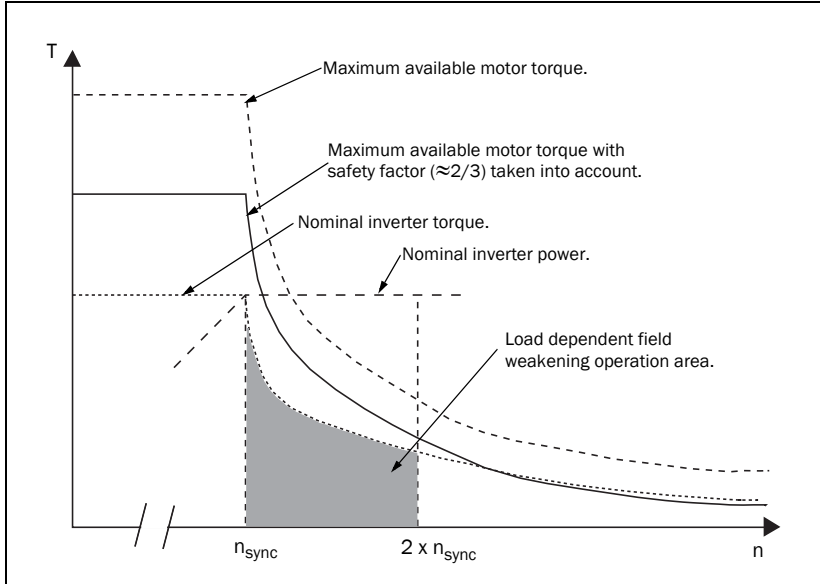


Fig. 27 Theoretical load dependent field weakening operation

The maximum over synchronous speed can be set between Sync. Speed and  $4 \times$  Sync. Speed via Speed 4 in menu [3AA]. If Speed 4 is set to a value  $<$  Sync Speed, then load dependent field weakening operation is not active.

Set menu [343], Max Speed at least 200 rpm higher than Preset Speed 4, to give the internal speed PI controller room for regulation. The load below which the load dependent field weakening operation is active can be set in menu [3AD]. Read in menu [100] or [713] the torque indication in % with the max. load used in practice at sync speed and set this value in menu [3AD] accordingly. For more information about field weakening operation, contact your sales representative.

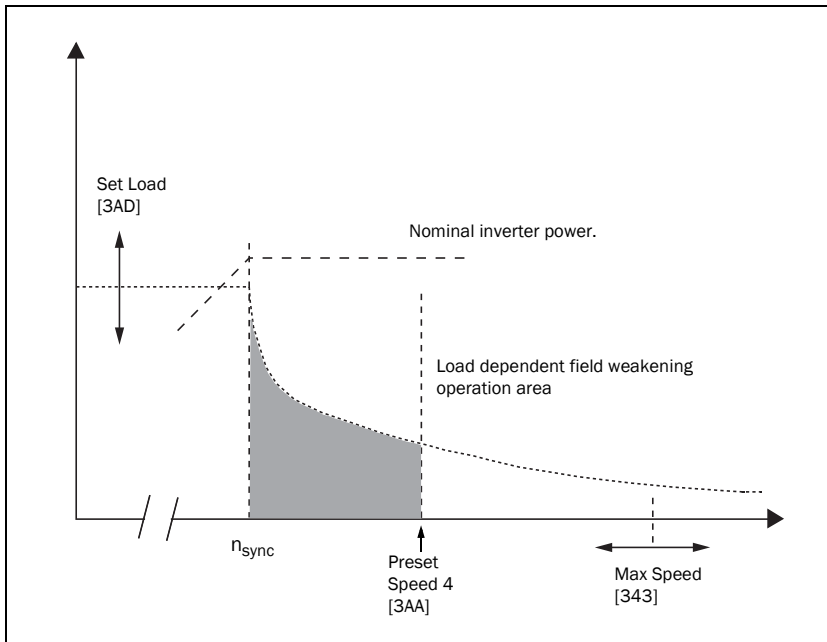


Fig. 28 Settings for load dependent field weakening operation

### 4.3.9 Parameter 3AG - Crane N-function

Sets the function of CRIO/Crane I/O interface N(Null) input. There are three selectabel functions in Parameter [3AG].

1. Zero Pos  
Null contact (dead) is used to prevent/block start at drive power on.  
Example:  
If the joystick is in drive position (power is off), start will be prevented/ blocked if mains power is switched on.
2. Brk Ackn.  
Null contact is used for mechanical brake acknowledge signal. The acknowledge signal is either connected from the brake contactor or from a proximity switch on the brake. The signal is used for brake fault monitoring during start, stop and operation. Monitoring is using Brake fault trip time [33H]. for further information, see instruction manual for Emotron VFX2.0, section 11.3.4 Mechanical brake control.
3. Off  
When the input is not used, highpotential is not required.





## 5. Functional Description

In the variable speed drive a number of menus appear when the crane option board is connected and automatically recognised.

In certain menus a different selection, compared with the standard settings, has to be made.

### 5.1 Changed defaults when crane option board is activated

Activate the crane option board by setting menu [3A1] crane option board = On.

After executing Load Default Values in menu [243] a number of defaults will change from the standard default settings.

The changed inverter defaults are following parameters:

| Menu | Function          | Changed default |
|------|-------------------|-----------------|
| 214  | Reference control | Option          |
| 215  | Run/Stop control  | Option          |
| 241  | Select set        | Option          |

See § 4.3.2, page 37.

| Menu | Function           | Changed default |
|------|--------------------|-----------------|
| 33C  | Brake release time | 0.5 s           |
| 33E  | Brake engage time  | 0.5 s           |
| 33F  | Brake wait time    | 0.5 s           |
| 339  | Start Mode         | Fast            |

See the Process Protection section in the manual for the main product.

| <b>Menu</b> | <b>Function</b>  | <b>Changed default</b> |
|-------------|------------------|------------------------|
| 423         | Motor lost       | Trip                   |
| 424         | Overvolt control | Off                    |

## **5.2 Menu descriptions**


All menus are described in the instruction manual for the variable speed drive.

## 6. Installation

This chapter describes how to mount the option board in the variable speed drive. Up to three different option boards and one communication board can be mounted.

### 6.1 Polarisation of flat cables

The flat cable is marked with colour on one side and has a tap on the micromatch male contact. This side must be matched to the female micromatch contact on the control board and option board respectively, where a small hole in the board is located.

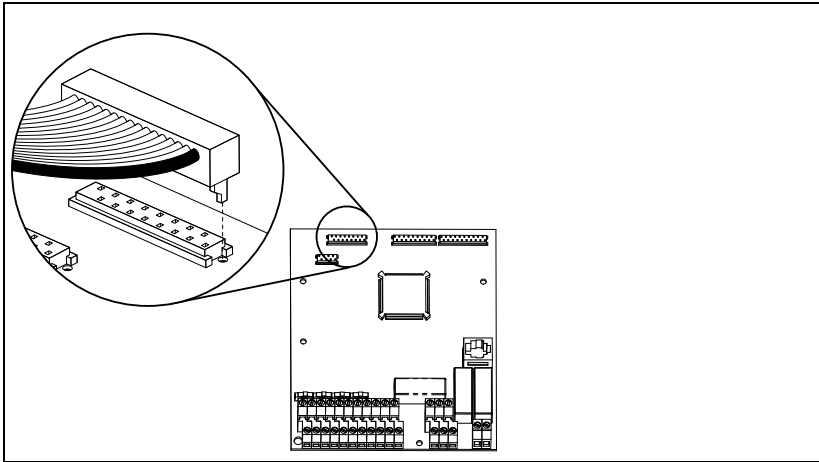

*Fig. 29 Polarisation of flat cable*



**CAUTION!**

**Incorrect connection might cause damage to both the option and to the control board/external equipment.**

---

## 6.2 Mechanical mounting

Make sure that the variable speed drive has been switched off for at least five minutes to ensure that the capacitor bank is discharged before continuing with installation! Also make sure that no external equipment connected to the drive's interface is switched on.

---

**NOTE: Correct installation is essential for fulfilling the EMC requirements and for proper operation of the module.**

---

## 6.3 Mounting the first option board

The first option board is always mounted on the slot marked 1 on the mounting plate. In this example we assume that no other option board is installed.

Delivered with the option board kit

- Option board and four screws.
- 20-pole flat cable for connection to crane interface.


Mounting

1. Connect the 16-pole flat cable to the X5 connector on the control board with the cable downwards as in Fig. 30.

---


**NOTE: The polarisation of the flat cable, see section 6.1 on page 53.**

---

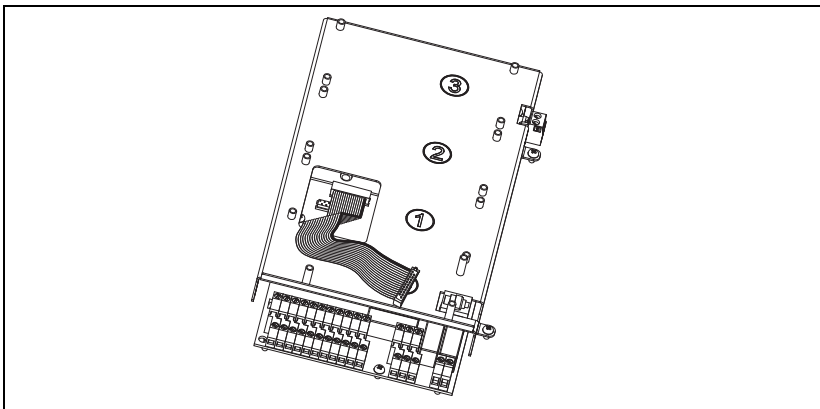

*Fig. 30 Flat cable connected to the control board*

2. Place the insulating sheet over the short spacers on the slot marked 1 on the mounting plate. Make sure the edge bent upwards is mounted towards the control board interface as in the figure below.

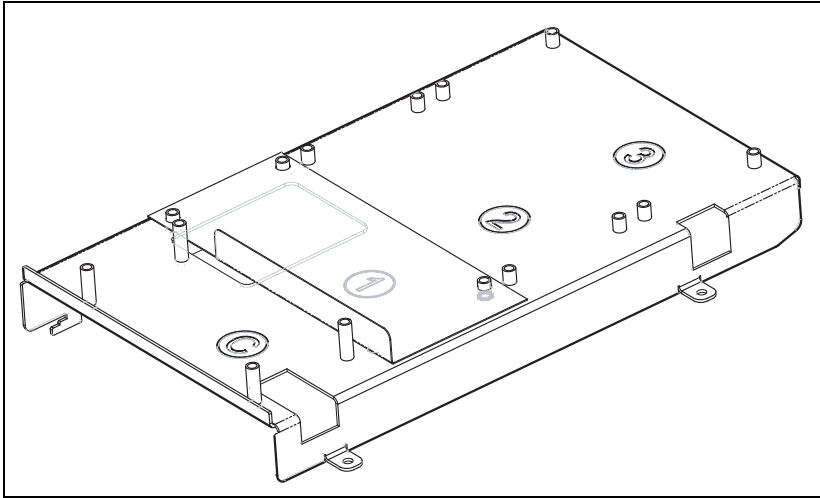


*Fig. 31 Mounted insulating sheet*

3. Connect the other end of the 16-pole flat cable to the X5A connector on the option board. Make sure that the polarisation is correct as in section 6.1 on page 53.

---


**NOTE: Connect the micro match male contact to the option in the same manner as on the control board, i.e. the tap on the micro match contact must be fitted into the hole in the PCB.**

---

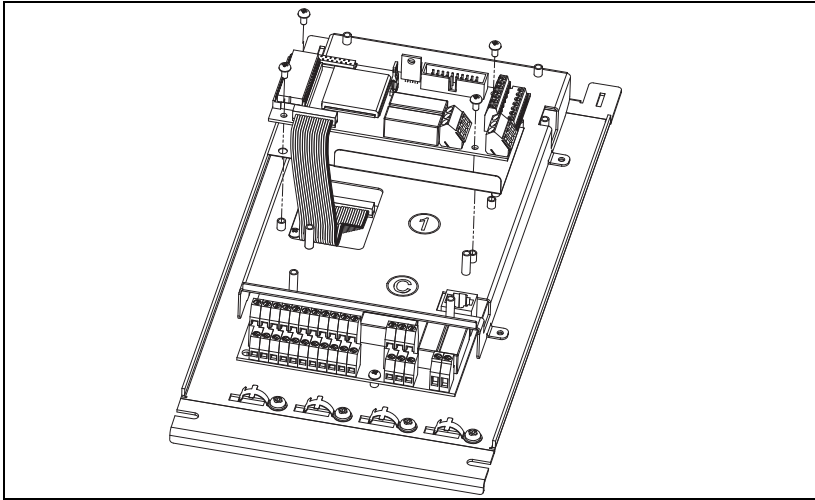

*Fig. 32 Flat cable connected to the option board*

4. Put the option board on the spacers.
5. Fasten the board using the four screws

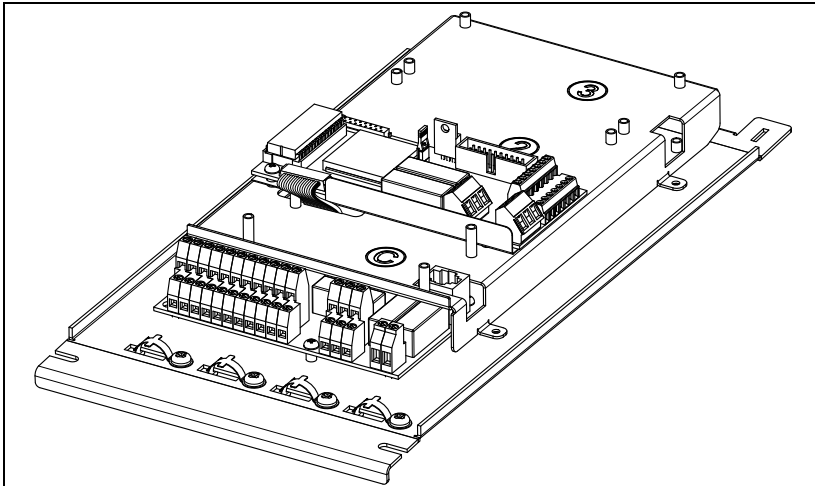

*Fig. 33 Mounted option board*

## 6.4 Mounting another option board


1. Place the insulating sheet on the spacers on the option board slot marked 2 or 3. It is necessary to select the slot closest to the already mounted option board.

---

**NOTE: Place the insulating sheet with the turned up edge facing the interface of the control board to achieve proper insulation between the option boards.**

---

2. Put the option board on the spacers.
3. Fasten the option board on the spacers using the four screws.
4. Connect the short flat cable between the X5B connector on the first option board and the X5A connector on the option board you have just mounted.

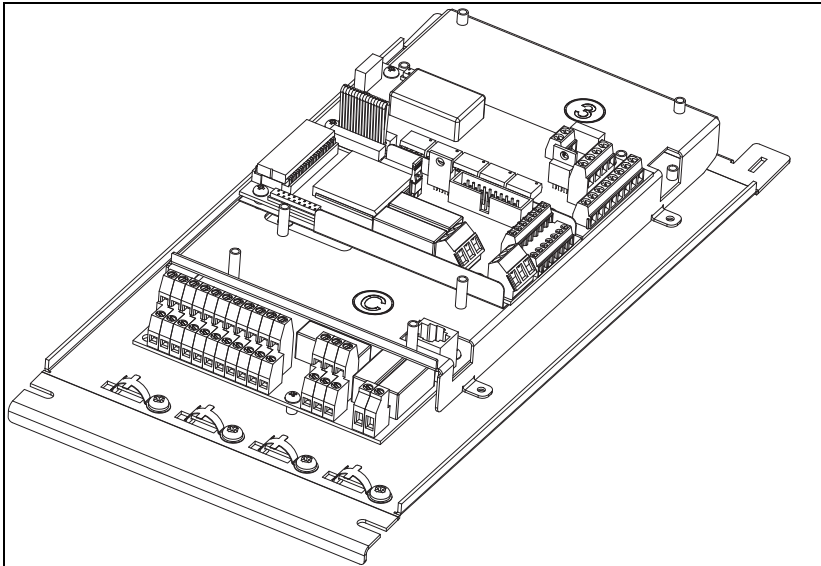

*Fig. 34 Two option boards mounted on the option mounting plate*

Main equipotential bonding conductors should be as short as possible. Their resistance from bonded part to the Main Earth Terminal (MET) should, in general, not exceed 0.05 ohm.





# Index

## Numerics

|                               |    |
|-------------------------------|----|
| 3-position joystick operation |    |
| Brake functions .....         | 29 |
| 3-position switch operation   |    |
| Setting .....                 | 29 |
| 4-speed Controller operation  |    |
| Setting .....                 | 25 |
| 4-speed Joystick operation    |    |
| Brake functions .....         | 25 |

## A

|                            |    |
|----------------------------|----|
| Analogue control operation |    |
| Analog Input 1 Setup ..... | 33 |
| Brake functions .....      | 33 |
| Setting .....              | 33 |

## C

|                           |    |
|---------------------------|----|
| Control                   |    |
| 3-pos joystick .....      | 28 |
| 4-speed joystick .....    | 24 |
| Analogue .....            | 32 |
| Control connections ..... | 5  |
| Crane                     |    |
| Specific parameters ..... | 51 |
| Crane Interface           |    |
| Connections .....         | 9  |
| Control signals .....     | 8  |
| Crane interface .....     | 4  |
| Connectors .....          | 11 |
| Crane option board .....  | 3  |
| Control signals .....     | 5  |

|                                 |    |
|---------------------------------|----|
| <b>D</b>                        |    |
| Deviation .....                 | 36 |
| <b>E</b>                        |    |
| Encoder .....                   | 15 |
| <b>F</b>                        |    |
| Fast motor response .....       | 47 |
| Fast reverse .....              | 45 |
| Field weakening operation ..... | 48 |
| <b>H</b>                        |    |
| Hoisting application .....      | 24 |
| Programming .....               | 13 |
| <b>J</b>                        |    |
| Jumper                          |    |
| Setting .....                   | 37 |
| <b>L</b>                        |    |
| Limit switches .....            | 44 |
| <b>M</b>                        |    |
| Magnetizing the motor .....     | 47 |
| Mechanical brake .....          | 38 |
| Function at start .....         | 38 |
| Function at stop .....          | 41 |
| Menu                            |    |
| (521) .....                     | 40 |
| Motor response fast .....       | 47 |
| <b>P</b>                        |    |
| Programming                     |    |
| VSD .....                       | 51 |

## **R**

### Relays

CR1 and CR2 .....5

Riding application .....24

## **S**

Safety .....2

Scaling .....46

### Setting

Brake functions .....25, 29, 33

## **U**

User interface .....6

## **V**

### VSD

Programming .....51

CG Drives & Automation  
Mörsaregatan 12  
SE-250 24 Helsingborg  
Sweden  
T +46 42 16 99 00  
F +46 42 16 99 49  
[www.emotron.com](http://www.emotron.com) / [www.cgglobal.com](http://www.cgglobal.com)

CG Drives & Automation, 01-3411-01r4, 14-11-2011